

## Room Modes




On the back side of the display, there is a switch to change the mode of the room.

- Hit the input button at the bottom of the to switch from video conference mode to presentation mode.


1 is video conference mode

2 is presentation mode

\*if you hit the power button the displays will all lose their signal. Simply turn the unit back on to get the signal back on the displays

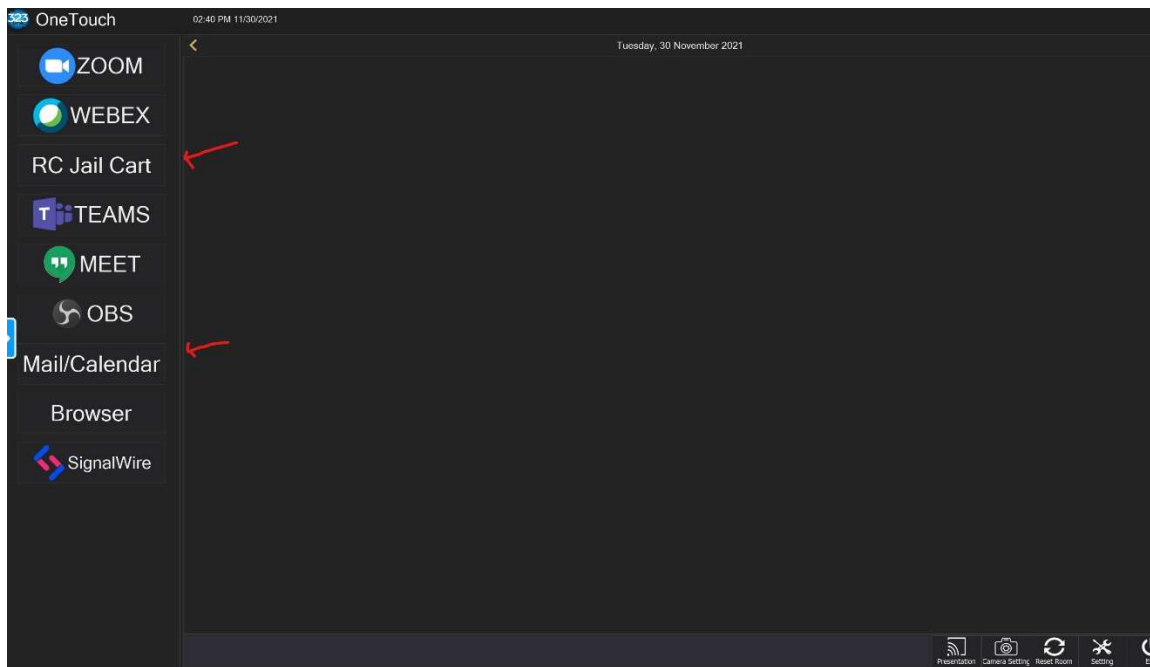


The custom buttons on the sidebar are for quick access to your Signal Wire Rooms and mail/calendar for this room. These buttons can be arranged in the order of your preference and new ones can be added as well. For more info on this please refer to our full OneTouch Guide on this process.

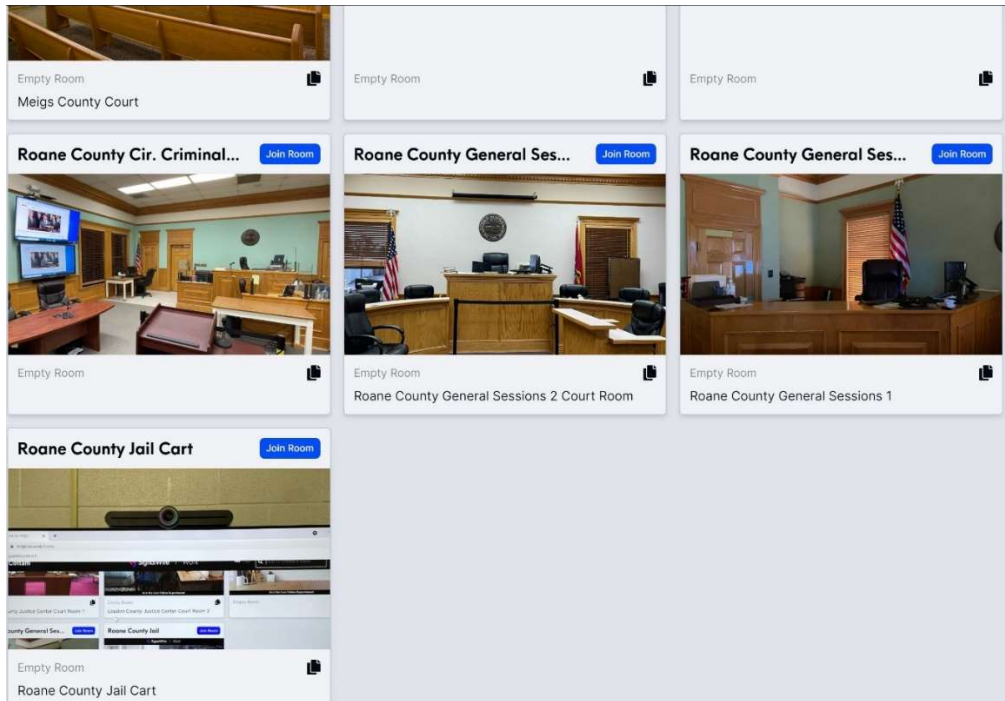

After tapping the Signal Wire button on your OneTouch system you will arrive to this page, <https://tn9jd.sw.work/home>

From here you can enter into the designated room for this system and proceed with your meeting.

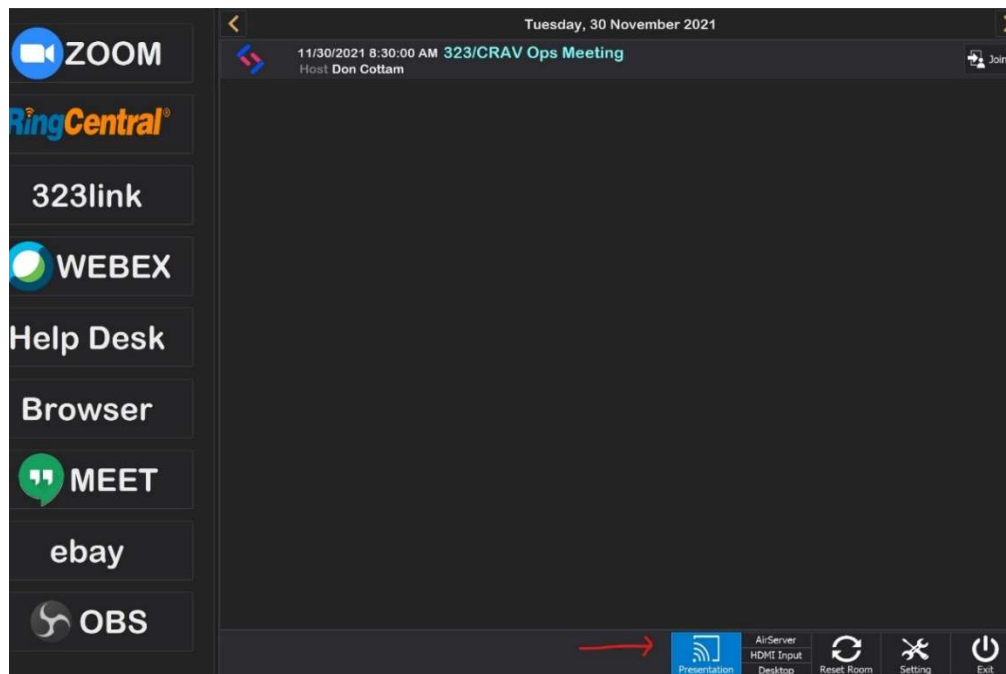

To share documents, select the Presentation button, there you will see three options to share. Airserver, HDMI input and to share straight from the desktop.